




why! N240JU LCD Bildschirm Replacement

Written By: Felice Suglia





Step 1 — accumulator

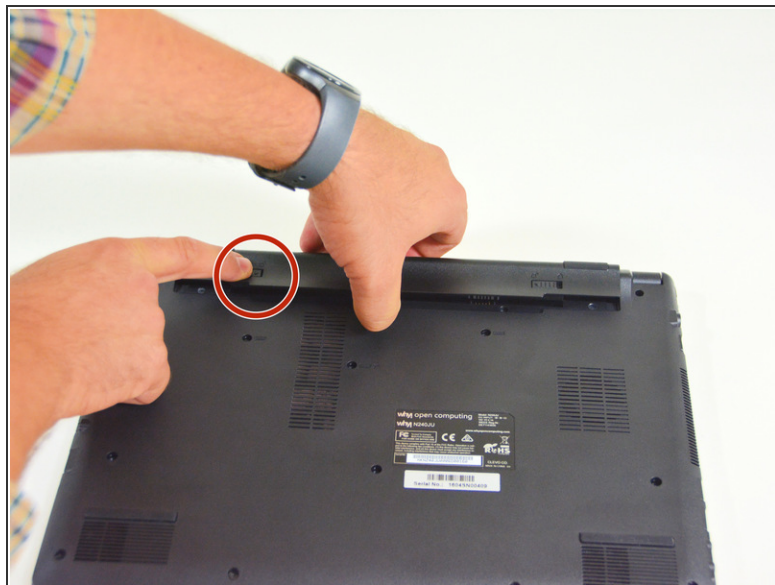


- First open the latch on the left side.
- Then remove the accumulator with simultaneously open latch on the left side.

Step 2 — Access to major components

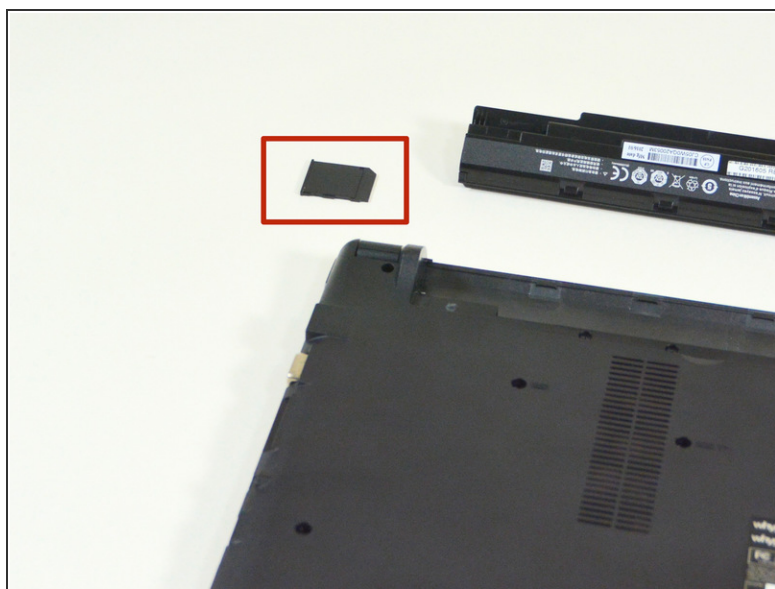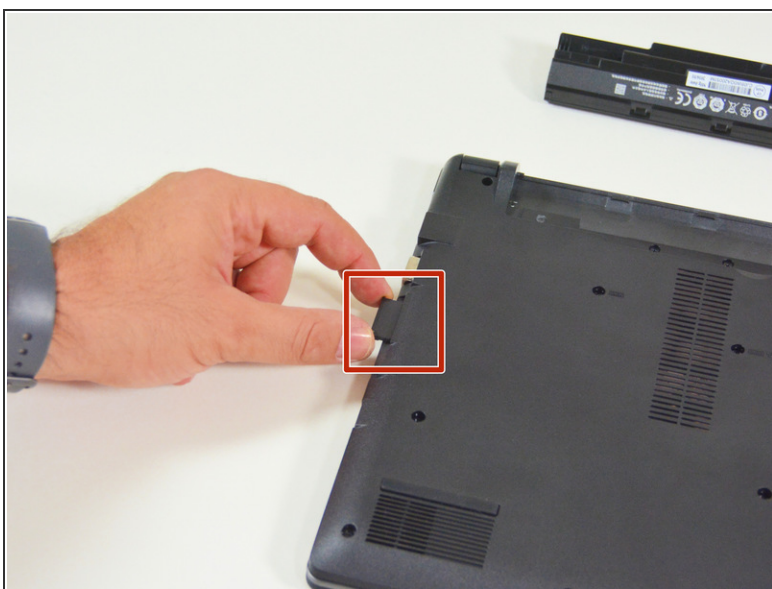


- Places first imitated memory card.
- Then remove this counterfeit card and put it down on your desk.

Step 3

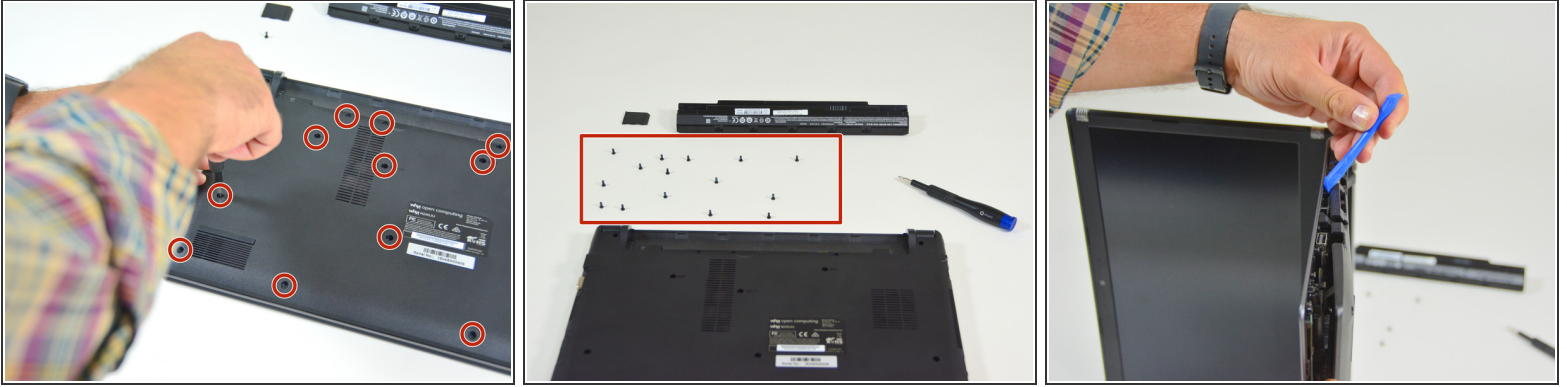


- Places you are holding the 15 screws the bottom cover of the computer.
- And then loosen these screws and put them onto your workplace.
- Loosen danacch the fortifications of the lower cover as shown in this step Figure 3.

Step 4 — LCD screen

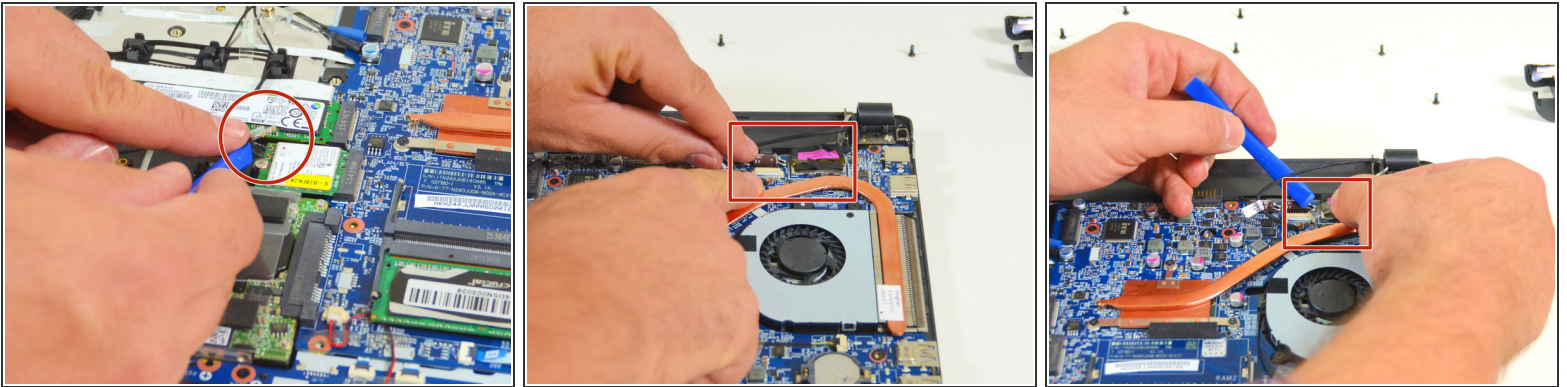


- Thus, the LCD screen can be removed must first be released from the Wi-Fi chipset, the antenna cable.
- Places then the two connectors of the LCD screen.
- Then remove the Verbindungskabel from the first of the two plugs.

Step 5

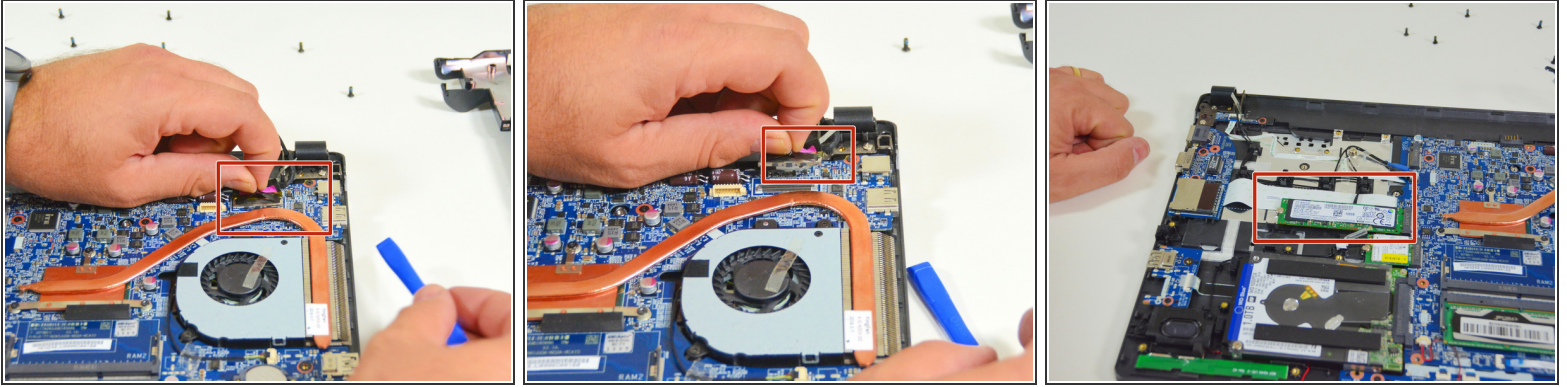


- Then loosen the tape of the second connector.
- Then, disconnect the connection cable from the second connector.
- Places then the M.2 SSD hard drive.

Step 6

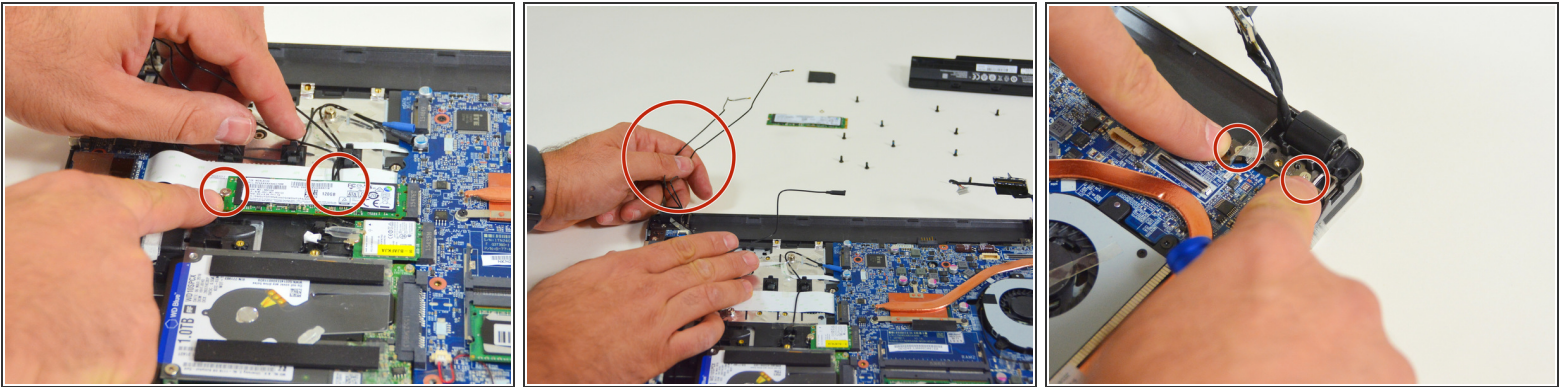


- Remove after this hard drive as the Wi-Fi connection cables must be exposed.
- Now place freely these cables.
- Places you now which secure the two screws on the LCD screen on the side of the fan.

Step 7

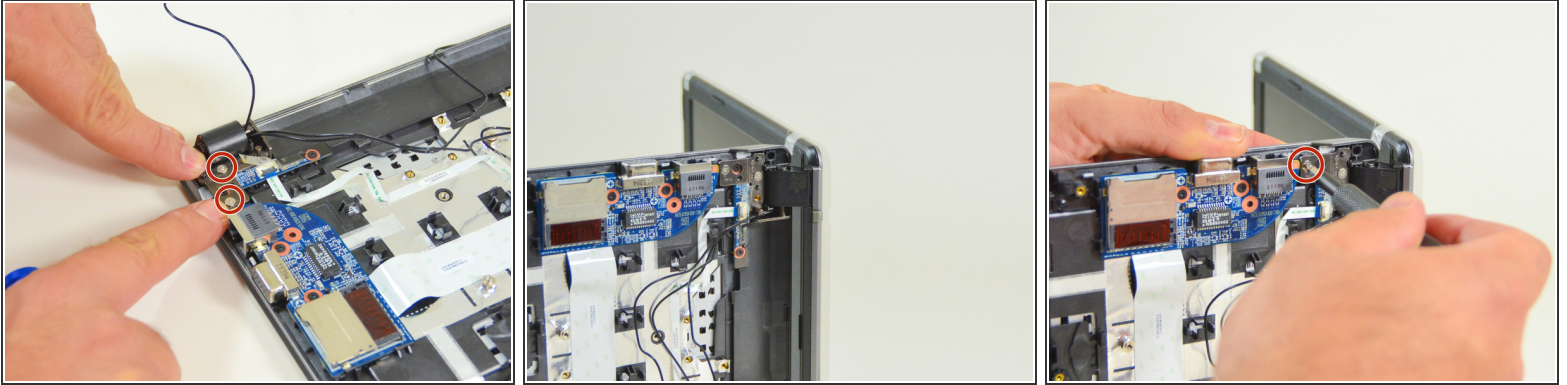


- Places Now the two screws that secure the LCD screen on the other side.
- Now set the laptop as the 2nd picture of this step are displayed that on.
- Loosen the first screw.

Step 8

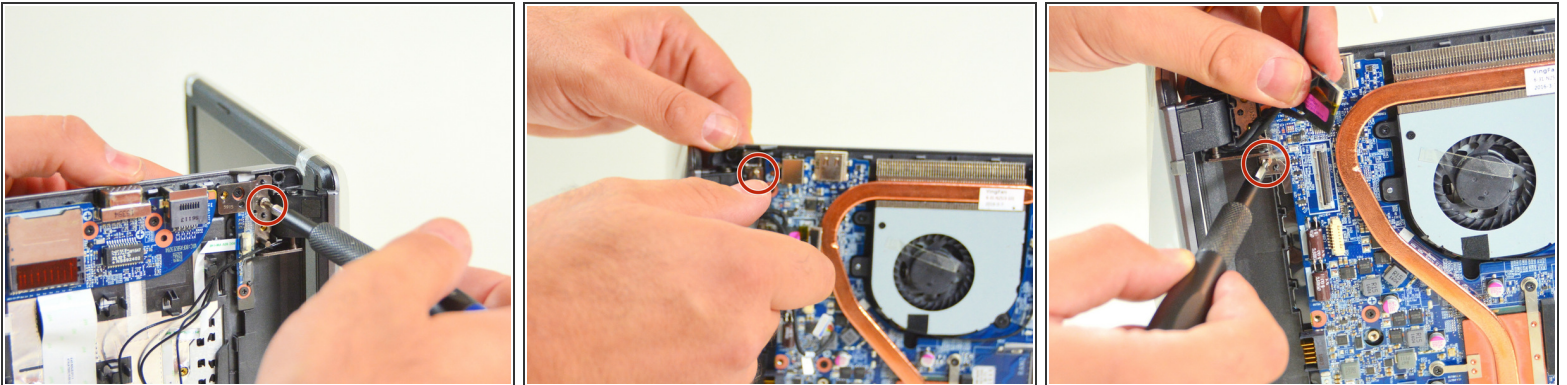


- And then loosen the second screw.
- Now place de laptop back to the workplace as in the second image Intro step shown. Now loosen the third screw.
- Thereafter, the fourth screw.

Step 9

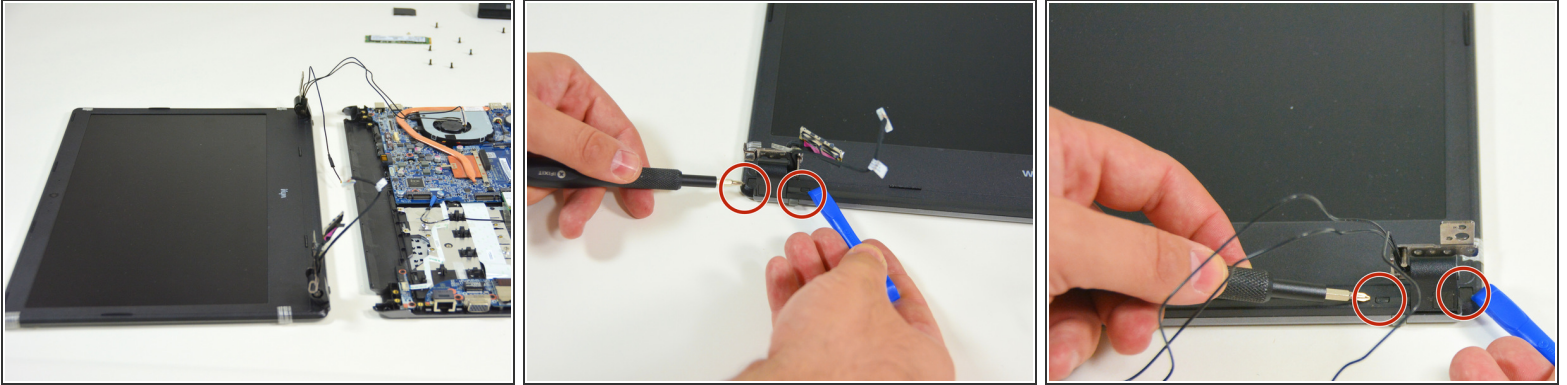


- Since the four screws are now solved, you can disconnect the LCD screen. The hinge joint is fixed to the screen.
- Places Now the left hinge the two screw covers.
- Places then the screw covers on the other hinge.

Step 10

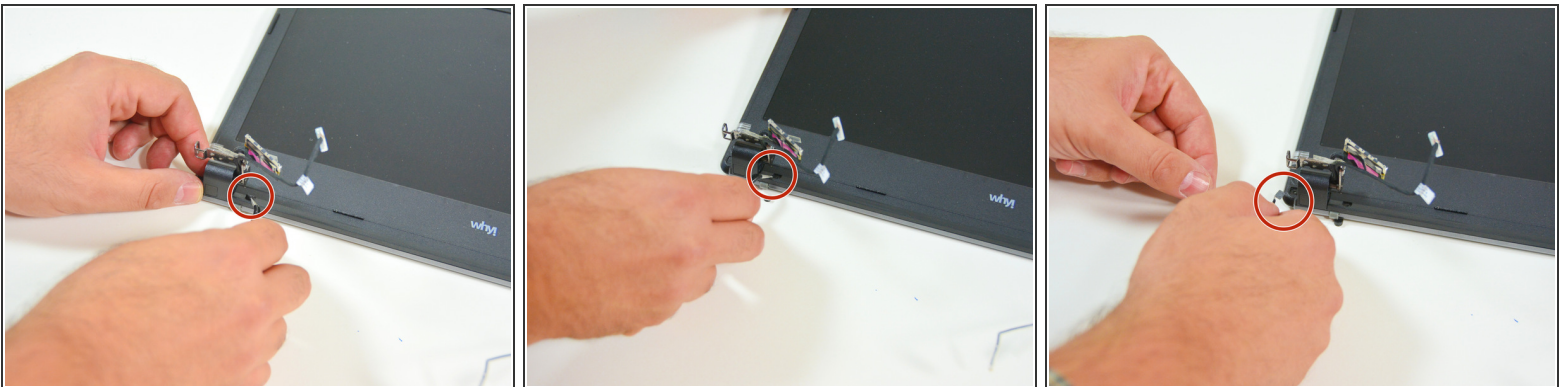


- Now remove these covers on the left hinge.
- First on the right,
- then on the left side.

Step 11

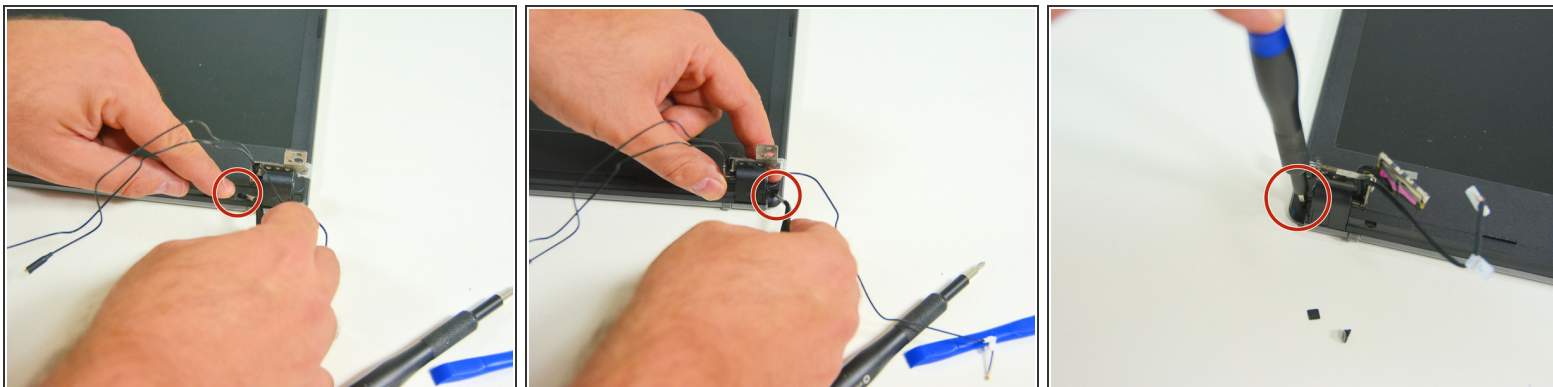


- Now repeat this procedure on the right hinge.
- Now go to the left hinge back and loosen the external screw.

Step 12

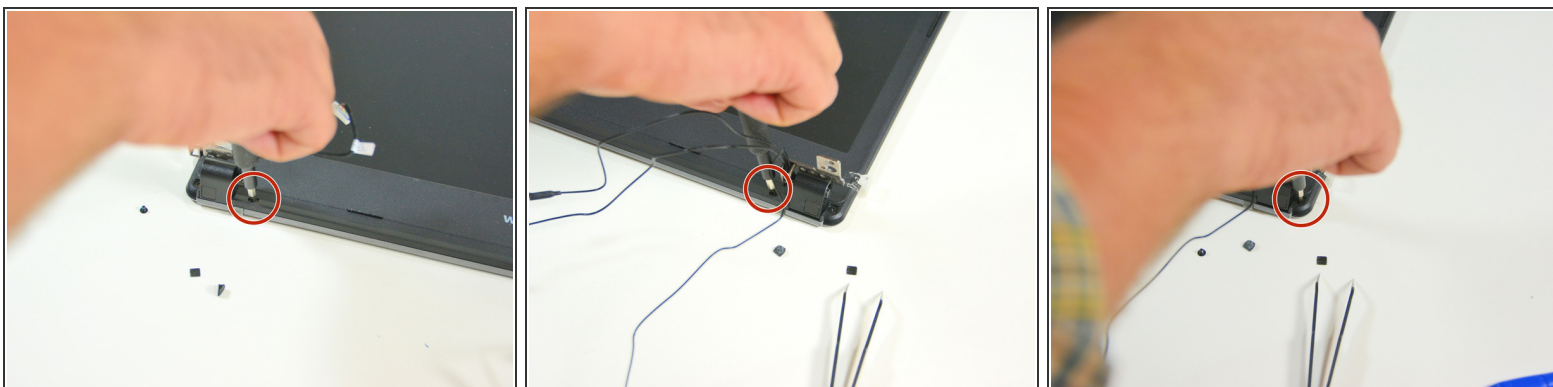


- Then loosen the internal screw.
- Repeat this procedure on the right hinge.

Step 13

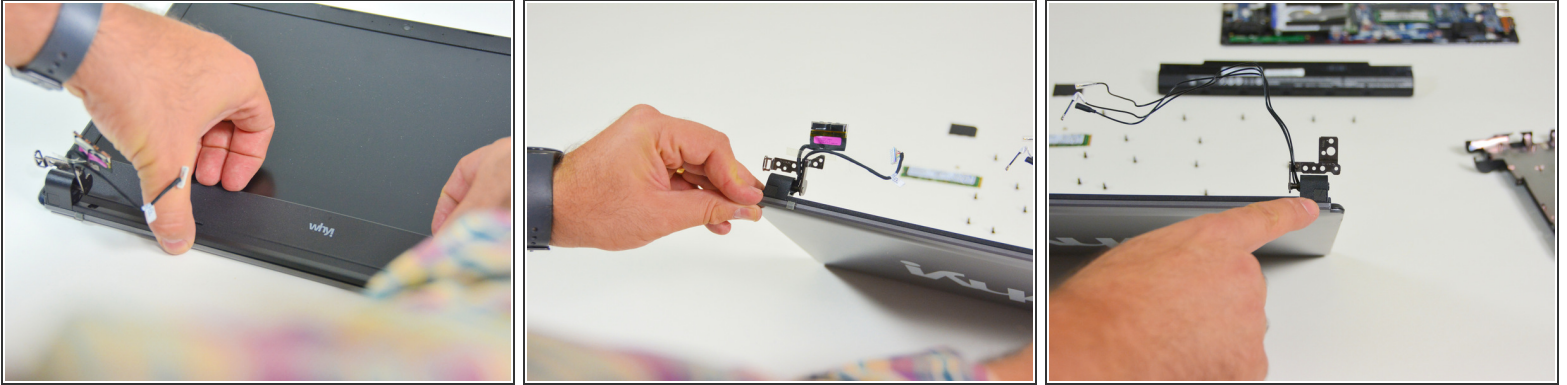


- Now you can unclip the LCD screen cover delicate.
- Places the screw cover of the left hinge joint.
- Places the screw cover of the right hinge joint.

Step 14

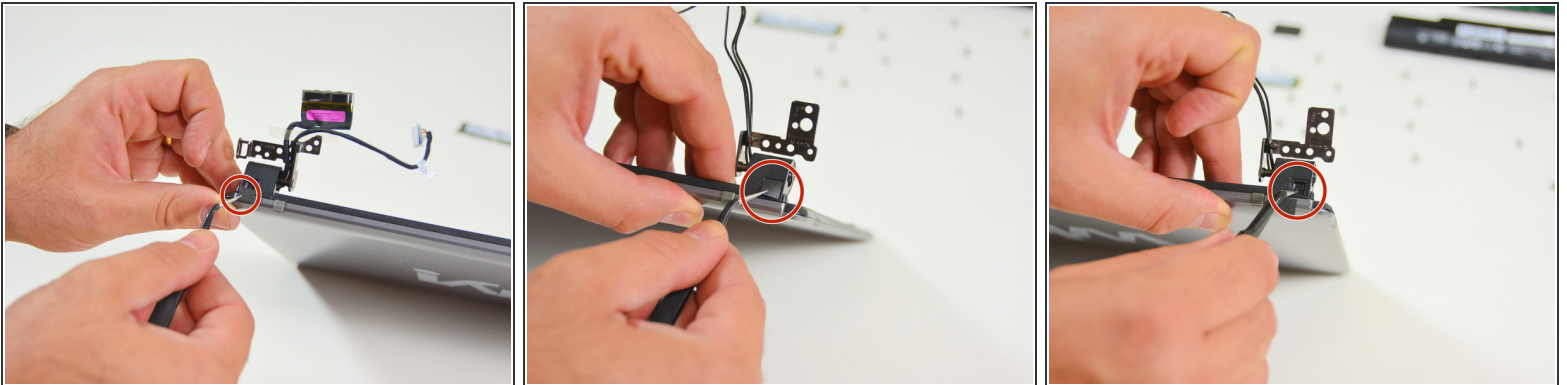


- Remove the cover on the left hinge.
- Also remove the cover on the right hinge.
- Once the covers are removed you can now see the mounting screws.

Step 15

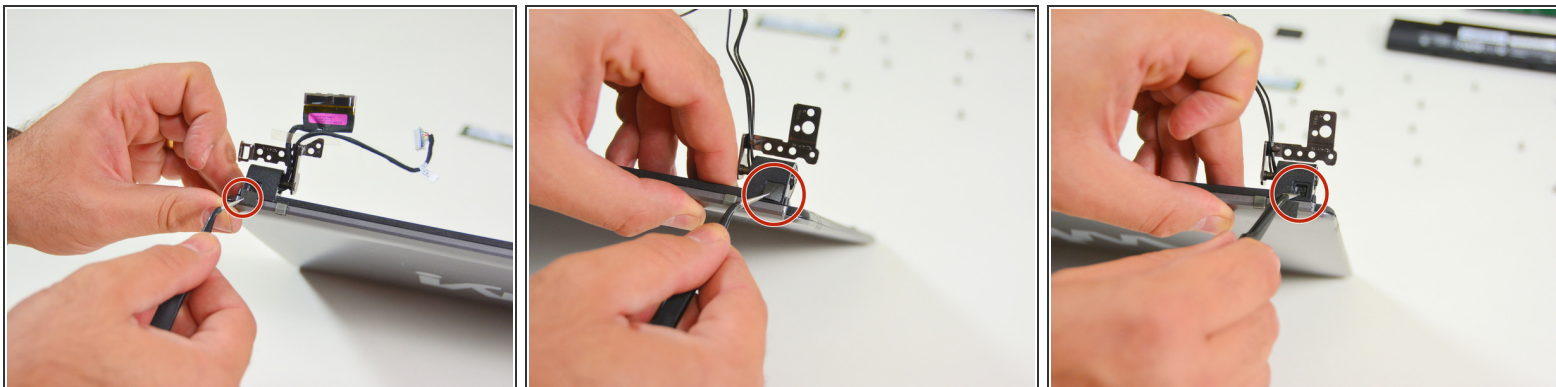


- Loosen the screw on the left hinge.
- Then loosen the screw on the right hinge.
- Once the screws are loosened, you can now remove the left cover.

Step 16

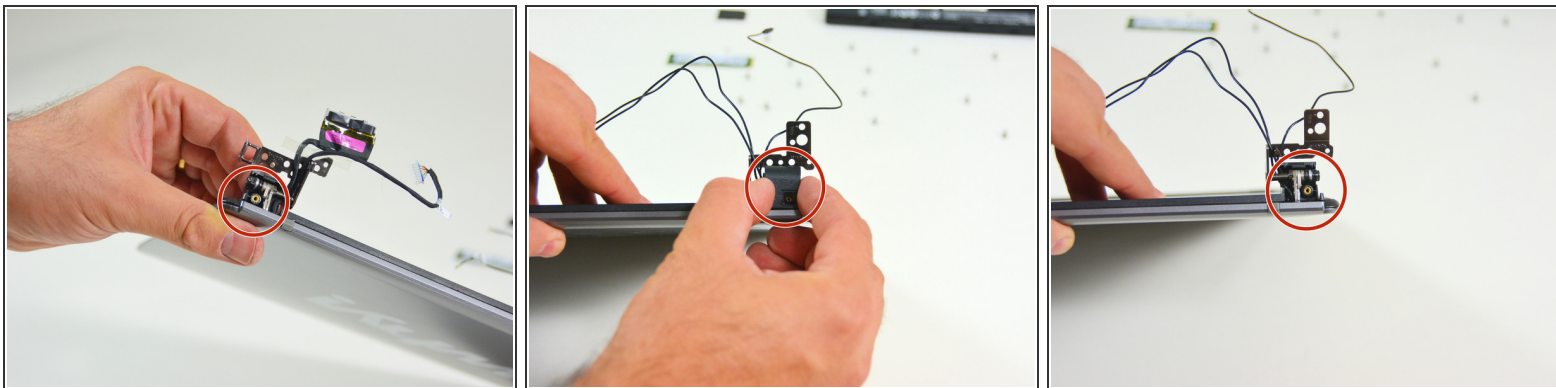


- In this picture, the left cover is removed.
- Remove then the right cover.
- In this picture, the right side cover is removed.

Step 17

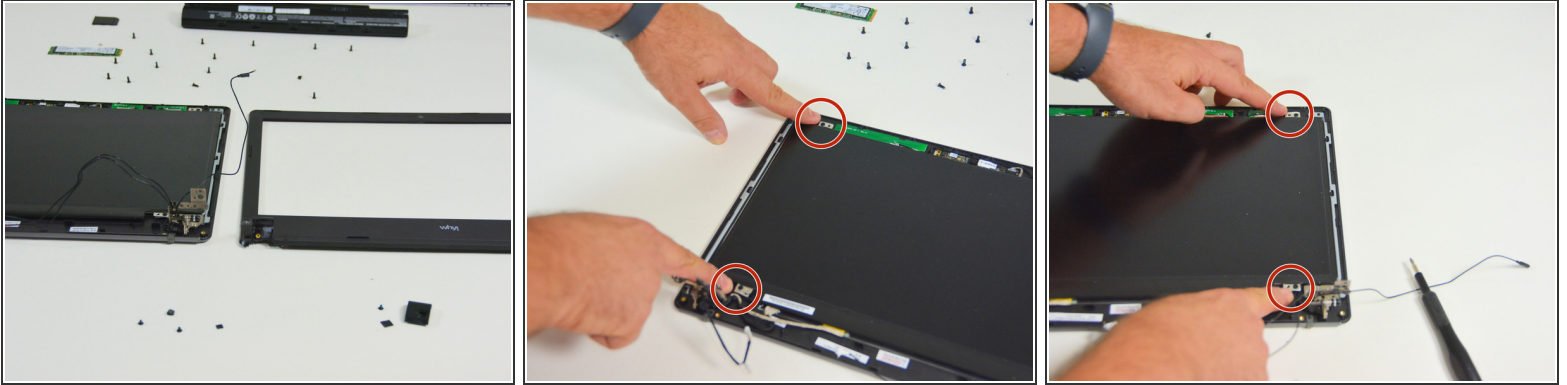



- Once this is done, the LCD screen for dismantling is ready.
- Places you on the screen frame its attachment screws and loosen them. Two on the left side.
- Two on the right side.

Step 18

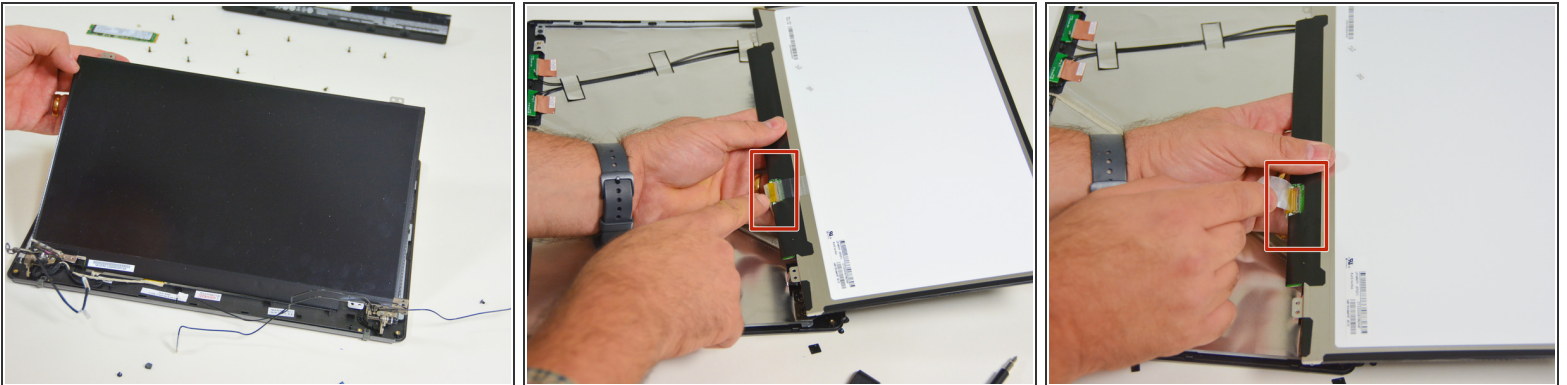

- Once dissolved screws, lift the LCD screen to easily and return to him.
- The connecting cable will appear.
- Now places the connector.

Step 19

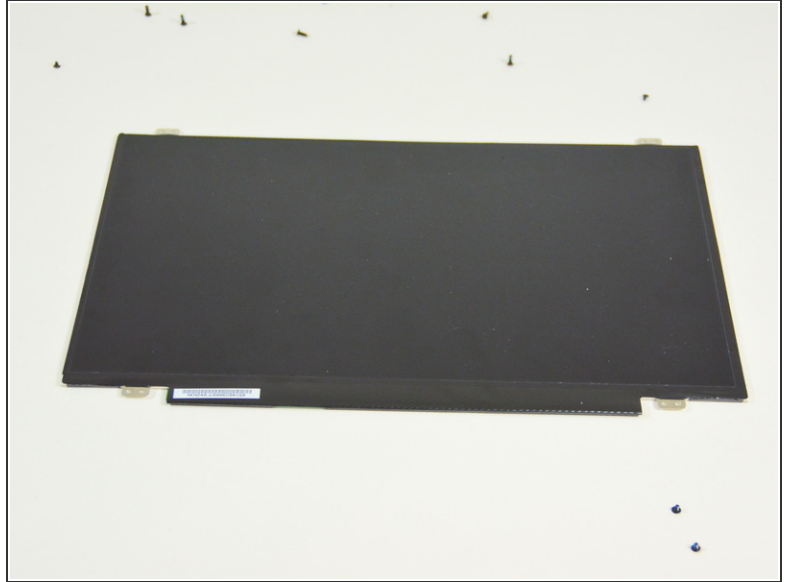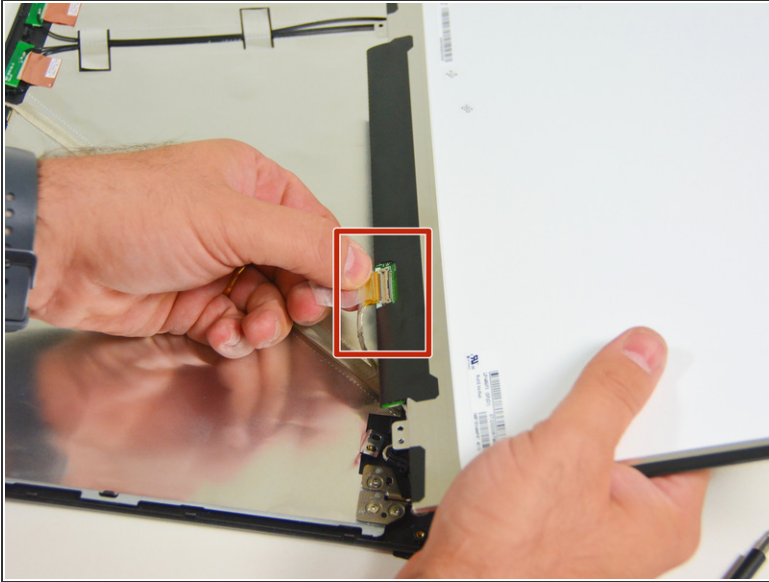

- Solve it, the connecting cable
- You can now put the LCD screen on the desktop.

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.

This document was last generated on 2017-06-18 09:03:12 AM.